




Operating and Installation Instructions

Micro Diaphragm Gas Sampling Pumps

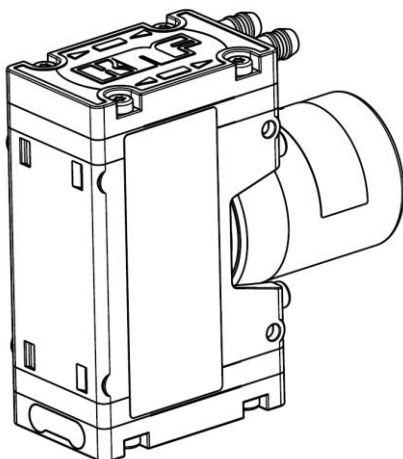

Type range:

NMS 030 KPDC		
NMS 030 KPDCB		

You have selected a high-quality KNF product; the following tips will help you operate it safely, and reliably over a long period of time. Carefully study the Operating and Installation Instructions before using the pumps and observe at all times the relevant instructions to avoid dangerous situations. The manual was produced for the serial pumps stated above. With customer-specified projects (pump types starting with "PJM" or "PMM") there could be differences in detail. For customer-specified projects please therefore take into account any agreed technical specifications, as well as these instructions.



KNF Micro AG
Zelglimatte 1b
CH-6260 Reiden
Schweizerland
Phone +41 (0)62 787 88 88
Fax +41 (0)62 787 88 99
E-mail: info@knf-micro.ch
www.knf-micro.ch

List of Contents

	Page
1. About this document.....	2
2. Use	3
3. Safety	4
4. Technical data	6
5. Assembly and function	8
6. Operation.....	10
7. Servicing.....	12
8. Troubleshooting.....	13
9. Decontamination declaration.....	14

1. About this document

1.1. Use of the Operating and Installation Instructions

The Operating and Installation Instructions are part of the pump.

- ➔ Forward the Operating and Installation Instructions to any subsequent owners of the pump

Project pumps

Customer-specific project pumps (pump models which begin with "PJM" or "PMM") may differ from the Operating and Installation Instructions.

- ➔ In the case of project pumps, take note of any additionally agreed specifications.

1.2. Symbols and markings

Warning



WARNING

This symbol indicates a potential danger.

It also indicates the possible consequences of failure to observe the warning. The signal word (e.g. "Warning") indicates the level of danger

- ➔ Here you will see actions for avoiding the danger and potential consequences.

Danger levels

Signal word	Meaning	Consequences if not observed
DANGER	warns of immediate danger	Consequences are death or serious injury and/or serious property damage.
WARNING	warns of potential danger	Death or serious injury and/or serious damage to property are possible
CAUTION	warns of a potentially dangerous situation	Minor injury or damage to property are possible.

Tab. 1

Other information and symbols

- ➔ This indicates a required activity (step).
- 1. This indicates the first step of a required activity. Additional consecutively numbered steps follow



This symbol indicates important information

2. Use

2.1. Intended use

KNF pumps in the NMS030 range are to transfer, evacuate and compress gases.

Owner's responsibility

Operating parameters and conditions

Only install and operate the pumps under the operating parameters and conditions described in Chapter 4, Technical data. Only completely installed pumps may be taken into service.

Requirements for transferred medium

Before using a medium, check whether the medium can be transferred danger-free in the specific application case.

Before using a medium, check the compatibility of the materials of the pump head, pump housing, diaphragm and valves with the medium.

The temperature of the medium must lie within the permissible temperature range (see Chapter 4).

The transferred gas should not contain particles as these can prevent the pump from working correctly. If this cannot be guaranteed, a filter < 100 µm with sufficiently large filter area must be used upstream of the pump.

See the type- plate or data sheet for full electrical and pneumatic data.

2.2. Improper use



DANGER

The pumps must not be operated in an explosive atmosphere.

The pumps are not suitable for transferring dusts and liquids.

- i** Please contact your local KNF partner for special designs that are not included in the technical specification (www.knf.com).

3. Safety

i Observe the safety precautions in Chapters 5. Installation and connection and 6. Operation.

The pumps are built according to the generally recognized rules of technology and in accordance with the pertinent occupational safety and accident prevention regulations. Nevertheless, dangers may occur during their use which may lead to injuries to the user or others, or to damage to the pump or other property.

Only use the pumps when they are in a good technical and proper working order, in accordance with their intended use, observing the safety advice within the Operating and Installation Instructions, at all times.

Personnel	<p>Make sure that only trained and instructed personnel or specially trained personnel work on the pumps. This especially applies to assembly, connection and servicing work.</p> <p>Make sure that all personnel have read and understood the Operating and Installation Instructions, and in particular the "Safety" chapter.</p>
Working in a safety-conscious manner	Always ensure adherence to all pertinent accident prevention and safety regulations when working on and operating the pump.
Handling dangerous media	When transferring dangerous media, observe the safety regulations for handling such media.
Notes	Always ensure adherence to all information stickers on the pumps, such as flow direction arrows and type plates, and keep stickers in legible condition.
Environmental protection	All replacement parts should be properly stored and disposed of in accordance with the applicable environmental protection regulations. Observe the respective national and international regulations. This especially applies to parts contaminated with toxic substances.
Disposal	<p>Dispose of all packaging in an environmentally-appropriate manner. The packaging materials are recyclable.</p> <p>Dispose of end-of-life equipment in an environmentally friendly manner. Use appropriate waste collection systems for the disposal of end-of-life equipment. Used pumps contain valuable recyclable materials.</p>
EU directives/standards	<p>For the purposes of the Machinery Directive 2006/42/EC, pumps are "partly completed machinery", and are therefore to be regarded as not ready for use. Partly completed machinery may not be commissioned until such time as it has been determined that the machine in which the partly completed machinery is to be assembled conforms to the provisions of the Machinery Directive 2006/42/EC. The essential requirements of Annex I of Directive 2006/42/EC (general principles) are applied and observed.</p> <ul style="list-style-type: none"> - General Principles No. 1 - No. 1.1.2. / 1.1.3. / 1.3.1. / 1.3.3. / 1.3.4. / 1.4.1. / 1.5.8. / 1.5.9. / 1.7.4. / 1.7.4.1. / 1.7.4.3.



As these partly completed machinery are OEM-models the power supplies and the equipment for disconnecting and switching-off the partly completed machinery respectively have to be considered when mounting as well as over-current and overload protective gear.

In addition a protection against mechanical parts in motion, hot parts, if existing, has to be provided when mounting.



The pumps comply with the safety requirements regarding electromagnetic compatibility in Directive 2014/30/EU, if the pump is powered by an industrially produced power supply which is used within the specified limits. (Supply voltage motor current, load torque).

The pumps comply with the fundamental requirements of Directive 2011/65/EU (RoHS2).

The following harmonised standards are met::

NMS 030 K_DC	NMS 030 K_DCB	
DIN EN 55014-1	DIN EN 55014-1 ¹⁾	
DIN EN 55014-2	DIN EN 55014-2	
DIN EN 60034-1	DIN EN 61000-6-1	
DIN EN 61000-6-1	DIN EN 61000-6-3	
DIN EN 61000-6-2		

Tab. 2

¹⁾ see chapter 5.2

Customer service and repairs

All repairs to the pump(s) must be carried out by the relevant KNF customer service team.

Only use genuine parts from KNF for servicing work.

4. Technical data

General parameters

Parameter	Value
Allowed ambient temperature (°C)	+ 5 to + 40
Allowed medium temperature (°C)	+ 5 to + 40

Tab. 3

Pump Materials of gas-contacting parts

Type designation NMS030 KP....

Components	Material ¹⁾
Head plate; intermediate plate	PPS
Housing	PPS
Valve plate / seals	EPDM
Diaphragm	EPDM

Tab. 4

¹⁾ according DIN ISO 1629 and 1043.1

The pump type NMS030K_DC stands for

Motor voltage	12V	24V
Power consumption [W]	12	12
Max. I load [A]	1.00	0.50
Max. permissible current consumption [A]	1.42	0.71
Connection [-]	Flat plug A 2.8x0.5.	
Protection class [-]	IP00	IP00
Weight ¹⁾ [g]	348	348
Delivery rate at atm. Pressure [l/min] ^{2), 3)}	≥ 11	
Max. operating permissible pressure [bar g]	0.2	
Max. vacuum [mbar abs]	< 200	

Tab.5

The pump type NMS030K_DCB (brushless) stands for

Motor voltage	12V	24V	12V-4	24V-4
Supply voltage [V]	12	24	10...28	10...28
Power consumption [W]	11	11	9.2	12
Max. I load [A]	0.91	0.46	0.80	0.50
Max. permissible current consumption [A]	1.8	0.9	1.8	1.8
Lead size [-]	AWG 24		AWG 24	
Protection class [-]	IP 54		IP 54	
Weight ¹⁾ [g]	218	218	218	218
Delivery rate at atm. Pressure [l/min] ^{2), 3)}	≥ 10.5		≥ 9.6 ⁴⁾	≥ 12 ⁵⁾
Max. operating permissible pressure [bar g]	0.2		0.2	
Max vacuum [mbar abs]	< 200		< 200	

Tab.6

¹⁾ The weight may differ slightly from the stated value, depending on the version.

²⁾ Depending on the application level (MASL), ambient temperature, material design of the pump head and the connection hoses used, the flow rates may vary from the values shown.

³⁾ Measured with air at 20°C / at atmospheric pressure

⁴⁾ At 5VDC control voltage

⁵⁾ At 6VDC control voltage

Motor electrical specifications DCB-4 12V / 24V

Electrical connections			
Function	Lead color	Signal name	Size
+ Supply voltage	Red	+ Vs	AWG 24
- Supply voltage	Black	- Vs / GND	AWG 24
Speed control – input signal	White	Vctrl	AWG 24
Frequency output – output signal	Green	FG	AWG 24
DC control input Vctrl			
Control voltage range DC		0...5	[VDC]
Speed range 12V		300..3300	[1/min]
Speed range 24V		300..3700	[1/min]
Resistant to surge voltages up to		28	[VDC]
Input resistance (Vctrl < 5.3VDC) [62	[kΩ]
Threshold voltage		0.11	(VDC)
Speed/voltage constants 12V		660	(rpm/V)
Speed/voltage constants 24V		740	(rpm/V)

Control voltage characteristic	
FG frequency output	
FG pulses per mech. revolution	18 []
Specification speed control	Speed output signal
Output series resistance	4 [kΩ]
Output level "high" (Iout < 0.1mA)	4... 5 [V]
Output level "low" (Iout < 0.1mA)	max. 0.5 [V]

Tab.7


- i** Connecting (short-circuiting) the two connections "Frequency output – output signal" (green lead) and "Speed control – input signal" (white lead) switches the control to "2-lead" operating mode (DCB-2 24V).
- i** In case of type DCB 12V-4 and 24V-4, the supply voltage is not designed for operation with pulse-width modulated voltages (PWM).
PWM signal (frequency 6-20 kHz) can be used on the speed input signal to control the pump

5. Assembly and function

Only install the pump under the operating parameters and conditions described in Chapter 4, Technical data.

Observe the safety precautions (see Chapter 3).

5.1. Installation

Installation location	<p>→ Before installation, store the pump at the installation location to bring it up to ambient</p> <p>Make sure that the installation location is dry and the pump is protected against water in the form of rain, spray, splashes and drips.</p> <p>Protect the pump against dust.</p> <p>Protect the pump against vibration and impact.</p>
Installation position	<p>Generally speaking, the pump can be installed in any position. For maximum accuracy and rapid venting install the pump, at highest point in the system to prevent condensate from collection in the pump head.</p>
Contact and foreign body protection	<hr/> <div style="display: flex; align-items: center;"> <div style="text-align: center; margin-right: 10px;">  <p>WARNING</p> </div> <div> <p>Risk of physical injury and damage to the pump due to automatic start</p> <p>→ If the pump overheats and the thermal switch / electronics stops pump operation, the pumps will restart automatically as soon as the motor has had time to cool down.</p> <p>Take steps to ensure that this cannot produce a hazardous situation</p> </div> </div> <hr/>

5.2. Electrical connection

Only have the pump connected by an authorized specialist

Only have the pump connected when the power supply is disconnected.

When connecting the device to a power source, the relevant norms, directives, regulations and technical standards must be observed

Connecting the pump

1. Make sure that the power supply data match the data on the motor's type plate. The current consumption can be found on the type plate.
2. Connect the motor cables. For electrical data see Chapter 4.

i Note the proper polarity.

For DC motors:

red motor cable: +

black motor cable: -

In the case of brushless DC motors:

incorrect polarity may damage to the electronics.

Additional circuit for
brushless DCB Motor

In order to ensure that emissions comply with the EN 55014-1 emission standard, this pump type with a brushless DC motor DCB must be fitted with an additional circuit. The additional circuit must be installed as closely as possible to the motor.

The additional circuit must be installed according to the following wiring diagram and its defined components in order to achieve the required level of attenuation.

C1: Condenser
 $\geq 2200 \mu\text{F} / \text{UN} = 12 \text{ V}$
 $\geq 1000 \mu\text{F} / \text{UN} = 24 \text{ V}$

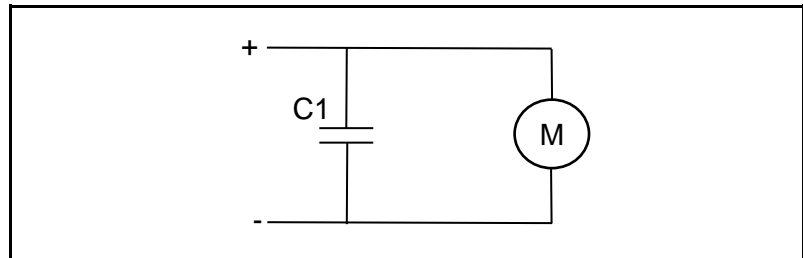


Fig. 8: Additional circuit

5.3. Pneumatic connection

Connected
components

→ Only connect components to the pump that are designed to handle the pneumatic data of the pump (see Chapter 4, Technical data)

Hoses

→ Only use hoses that are suitable for the maximum operating pressure of the pump (see Chapter 4)

→ Only use hoses that are chemically resistant to the media being pumped

5.3.1. Connecting the pump

i Arrows on the pump head indicate the flow direction.

1. Remove the protective caps from the hose connections.
2. Connect the suction and pressure lines.
3. If the pump is used to build up pressure, make sure that all transition joints between hose and pump are secure in order to ensure that the hoses cannot come off.
4. Check that the hoses and transition joints (hose connector/hose) are fitted correctly and securely.
5. Check that the system is leak-tight.

6. Operation

- Operate the pumps only under the operating parameters and conditions described in Chapter 4, Technical data
- Make sure that the pumps are being used properly (see Chapter 2.1).
- Avoid improper use of the pumps (see Chapter 2.2)
- Observe the safety precautions (see Chapter 3).
- The pump is a component intended to be incorporated into another machine. Before putting into service it must be established that the machinery or systems in which the pump is installed meets the relevant regulations



Risk of burning

The drive heats up.

- Avoid contact with the pump drive.

CAUTION

- Avoid contact with flammable materials

- i** Excessive pressure and the inherent dangers thereof can be prevented by placing a bypass line with a pressure relief valve between the pressure and suction side of the pump. Please contact your local KNF partner for further information (www.knf.com).

Pump standstill

- If the pump stops running, restore the system to normal atmospheric pressure.

For pumps with thermal switch or electronic overload protection:



Risk of physical injury and damage to the pump due to automatic start

If the pump overheats and pump operation is stopped by the thermal switch / electronics, the pumps will restart automatically as soon as the motor has had time to cool down

- Take steps to ensure that this cannot produce a hazardous situation

WARNING

Inspection

Regularly inspect the pump for external damage or leaks.

Switching the pumps on and off

Setting and regulating motor speed

The motor speed of the pump, and thus the flow rate, is adjustable and can also be regulated to some extent.

For more details, see Chapter 4, Technical data

Duty cycle / impulse operation

Impulse operation

KNF pumps are designed for continuous operation.

Short start and stop cycles may adversely affect the service life of the brushed motors

i If the pump is operated with short cycles in your application, please contact a KNF pump specialist for further information (Telephone number: see first page)

Turning the pump on

→ In order to guarantee that the pump can start every time it is advisable to reduce the back pressure to an acceptable level.

→ This is also the case if there is a short power cut.

i For more specific information contact the KNF specialist

Turning the pump off

Ensure that the system is subject to normal atmospheric pressure (release the hydraulic pressure).

7. Servicing

7.1. Servicing schedule

Component	Servicing interval
Pump	- Regular inspection for external damage or leaks

Tab. 9

7.2. Cleaning

7.2.1. Cleaning the pump

→ The pump, if necessary clean outside with a dry wipe. Do not use cleaning solvents as these may corrode plastic parts.

Prior requirements

- Isolate the pump from the power supply.
- Pump must be free of any hazardous substances
- Hoses must be disconnected from the pump

8. Troubleshooting

Pump does not work	
Cause	Fault remedy
Pump not connected to power supply	→ Connect pump to power supply
Power supply is not switched on	→ Switch on power supply
Thermal switch or pump electronics have responded	→ Disconnect pump from mains power supply. → Allow pump to cool. → Identify and eliminate cause of overheating/overload
Connections or pipes are blocked.	→ Check pipes and connections. → Remove blockage.
External valve is closed or filter is blocked	→ Check external valves and filters.
Diaphragm or valves are worn out.	→ Contact customer service

Tab. 10

Flow rate, pressure or vacuum to low	
The pump does not achieve the output specified in the Technical data or the data sheet	
Cause.	Fault remedy
Components in the system connected to the suction and pressure sides, such as hoses, valves or filters, are causing too much resistance	→ Modify installation, check the cross-sections of components
Hose connections are not leak tight	→ Secure transition joints between hose and hose connections with clamps or clamping elements
Particles in the pump	→ Clean the pump head, install suction-side filter if required
Incorrect interchange of pressure and suction line connections	→ Remove pressure and suction lines and reconnect correctly
The pump parts are not resistant to the medium to be transferred	→ Replace the pump head with a compatible version
Diaphragm or valves are worn out.	→ Contact customer service

Tab. 11

Fault cannot be rectified

If you are unable to identify any of the above causes, please send the pump to KNF customer service (see address on last page).

1. Isolate the pump from the power supply and remove the pump from the system.
2. Clean the pump (see Chapter 7.2.1)
3. Send the pump, with completed decontamination declaration (see Chapter 9), to KNF customer service stating the nature of the transferred medium.

9. Decontamination declaration

i KNF shall only undertake to repair the pump on condition that the customer provides certification of the transferred media and the cleaning of the pump (decontamination declaration)

1. Copy this page, or print out the decontamination declaration from our website <http://www.knf.com/downloads>.
2. Enter the pump model, the Serial No. and the transferred media in the form below and send the signed form together with the flushed and cleaned pump to KNF Customer Service.

KNF Micro AG
 Zelglimatte 1b
 CH-6260 Reiden
 Schweiz
 Tel. +41 (0)62 787 88 88
 Fax +41 (0)62 787 88 99
 E-mail: info@knf-micro.ch
www.knf-micro.ch

Customer decontamination declaration for repair order

We confirm that the pump below has been used to pump the following media, and that the pump has been flushed and cleaned.

Pump model	
Serial No.	
Pumped media	

The pump does not contain aggressive, biological, radioactive, poisonous, or other dangerous media

 Company

 Date/Signature

KNF worldwide

Find our local KNF partner on: www.knf.com



